
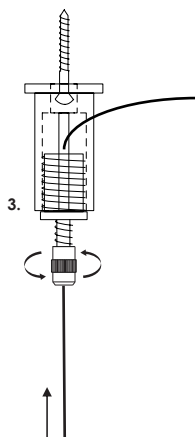
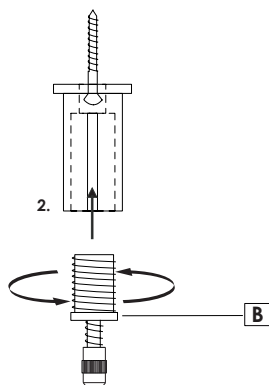


ASSEMBLY GUIDE

WIRE LOCK

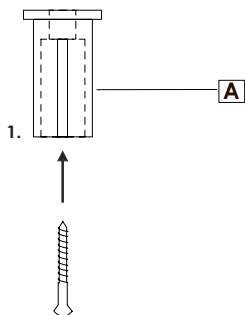

1. Attach part **A** to the ceiling by using a screw.
2. Connect part **B** to part **A**
3. Put the wire through the wire lock as shown, set height and tighten screw firmly