


INSTALLATION INSTRUCTION



# WAGO Connectors

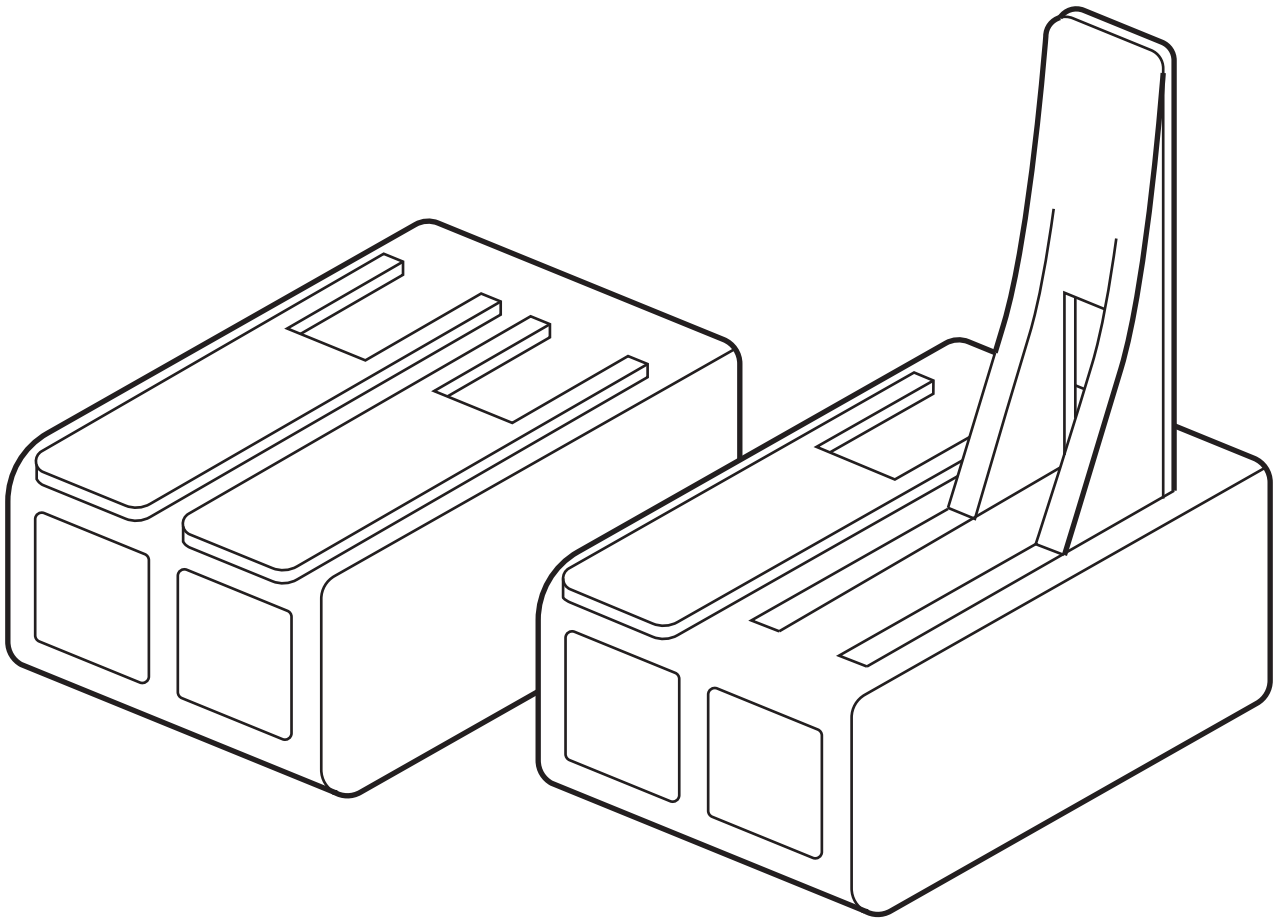



Rubn.

## INSTALLATION INSTRUCTION

Open, insert wire, and close to lock in place.

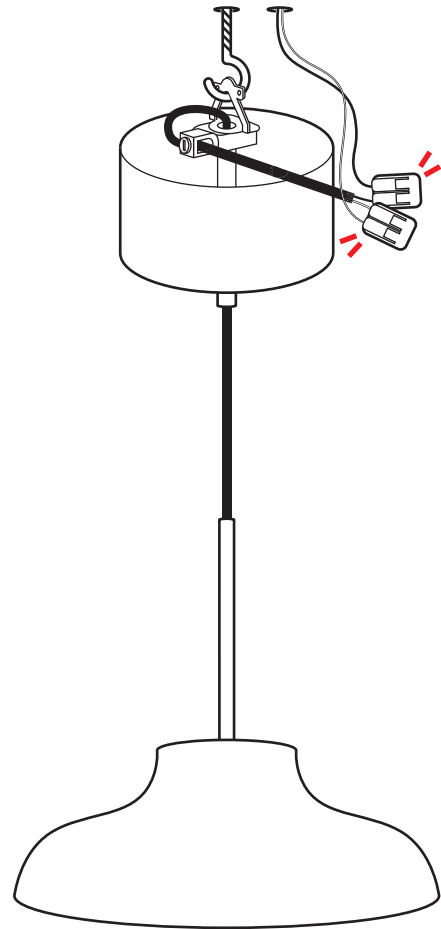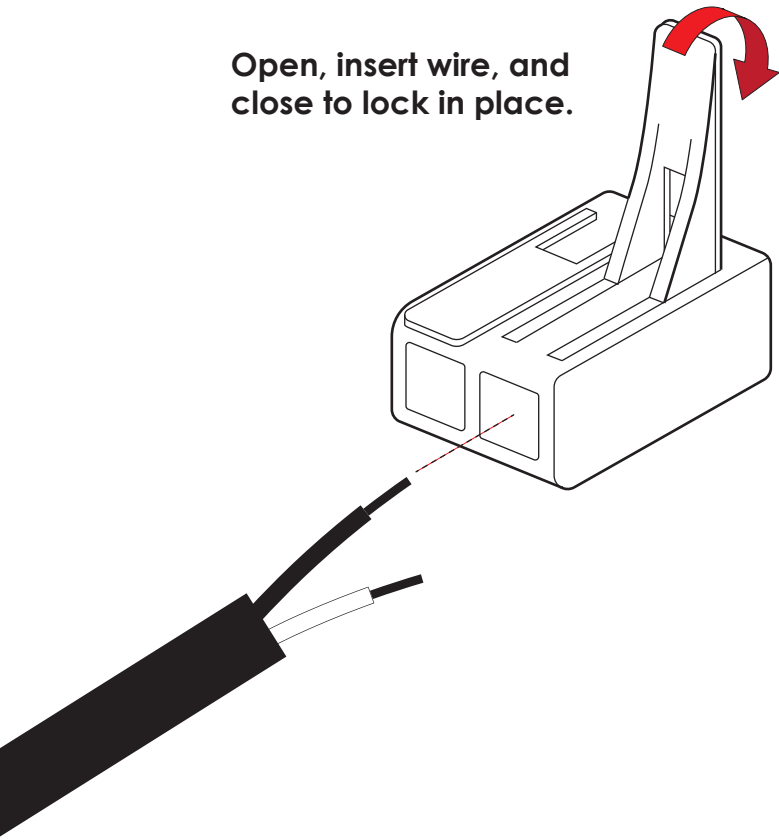

Connect wires correctly.

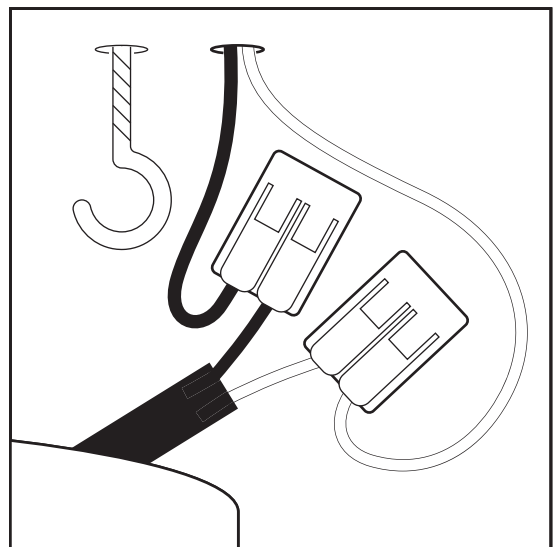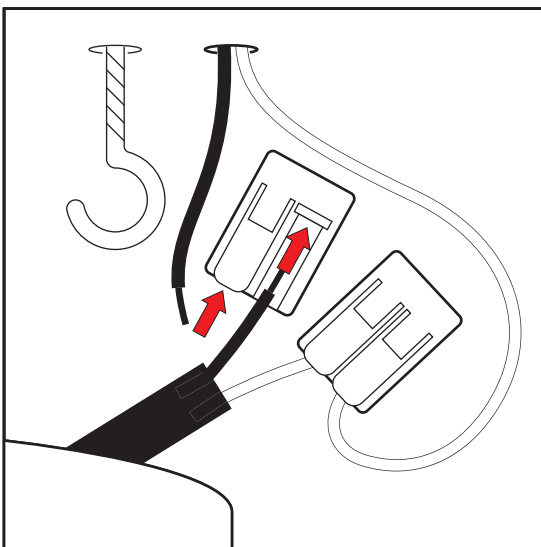

Rubn®